

AM/FM Digital Tune Sports Headset Radio

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack AM/FM Digital Tune Sports Headset Radio is perfect for anyone on the go! You can set up to 20 of your favorite stations in memory — 10 AM and 10 FM. The adjustable double headband lets you adjust both headbands for custom fit. Also, the moisture-resistant construction lets you use the headset in almost any weather conditions.

FCC STATEMENT

This device complies with Part 15 of *FCC Rules*. Operation is subject to the condition that this device does not cause harmful interference. Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- moving your radio from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the radio.

Important:

- This product is designed to be water-resistant, but should not be immersed in water or come in continuous contact with water. Before installing the batteries, be sure to wipe off drops of water on the product.
- Never use an electric hair dryer while wearing the headset.

INSTALLING BATTERIES

Your headset radio requires two AAA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries or different types of batteries (standard or alkaline).

Important: To protect stations stored in memory, be sure to turn off the radio before removing the batteries, and replace the batteries within 45 seconds.


1. Push down the battery compartment cover in the direction of the arrow and lift it open.
2. Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked beside the compartment.
3. Replace the cover.

When the sound becomes weak or distorted, **BATTERY** flashes, or the headset radio stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.


Caution: If you do not plan to use the radio with batteries for a month or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

ADJUSTING THE HEADBANDS

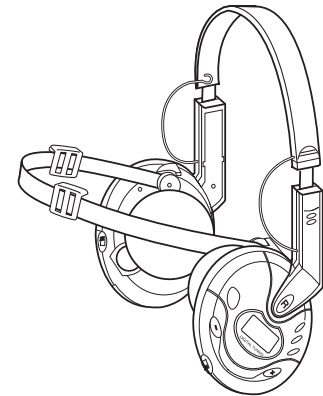

Adjust each headband separately until the headset fits snugly and comfortably on your head.

USING THE HEADSET RADIO

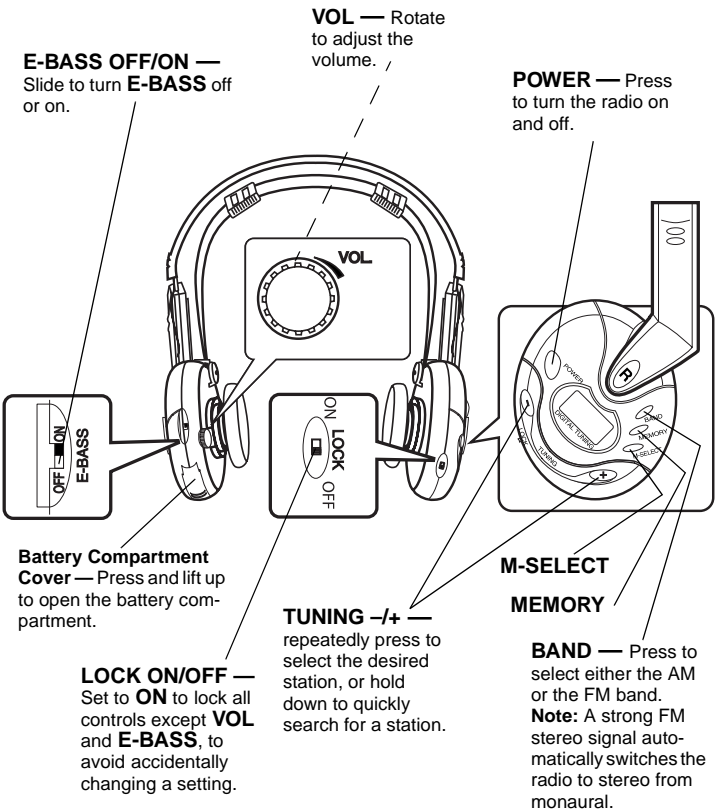

Memory Tuning

To store a station in memory, select the desired band and station, then press **MEMORY**. While **MEMORY** flashes, repeatedly press **M-SELECT** until the desired memory station number appears. Press **MEMORY** again to store the station.

To listen to a stored station, repeatedly press **M-SELECT** until the desired memory station number appears.

Auto Power Off

The Auto Power Off feature automatically turns off the radio 60 minutes after it was turned on. To continue using your radio, press **POWER** to turn it back on.

LISTENING SAFELY

To protect your hearing, follow these guidelines when you use the headset radio.

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

Traffic Safety

Do not wear the headset radio while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and could be illegal in some areas.

Even though the headset radio might let you hear some outside sounds when listening at normal volume levels, it can still present a traffic hazard.

CARE

Modifying or tampering with the radio's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your radio is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Frequency Coverage:	
AM	530 kHz–1710 kHz (10 kHz step)
FM	87.5 MHz–108 MHz (200 kHz step)
Output Power	15 mW + 15 mW
Power Requirements	Two AAA Batteries
Alkaline Battery Life	About 28 Hours
Weight with Batteries	4.6 oz (180 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99